

Bisulfite Addition Compounds as Substrates for Reductive Aminations in Water

Xiaohan Li, Karthik S. Iyer, Ruchita R. Thakore, David K. Leahy, J. Daniel Bailey,* and Bruce H. Lipshutz*



Cite This: <https://doi.org/10.1021/acs.orglett.1c02604>



Read Online

ACCESS |




Metrics & More



Article Recommendations



Supporting Information

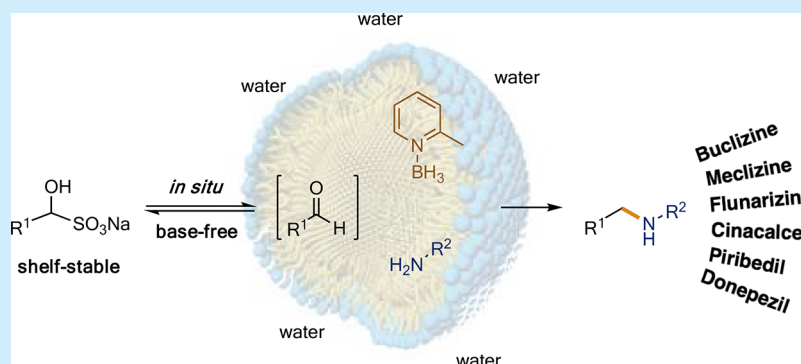


ABSTRACT: Highly valued products resulting from reductive aminations utilizing shelf-stable bisulfite addition compounds of aldehydes can be made under aqueous micellar catalysis conditions. Readily available α -picolineborane serves as the stoichiometric hydride source. Recycling of the aqueous reaction medium is easily accomplished, and several applications to targets in the pharmaceutical industry are documented.

A multistep synthesis of the 5-HT₄ receptor agonist TAK-954 (**1**) recently appeared,¹ showcasing use of water as the reaction medium in each reaction. The overall evaluation led, as stated, to “77% less material inputs, 94% less organic solvent, and surprisingly, 48% less water, while improving overall yield from 35% to 56%.” Included among this award-winning² report was a reductive amination (i.e., **2** + **3**; Scheme 1) that relied on an aldehyde precursor bisulfite addition compound **4**, in equilibrium with its aldehyde equivalent (**3**), which together underwent a very efficient conversion in aqueous micellar media using α -picolineborane (1.5 equiv) as the reducing agent. Such educts are very attractive given their inherent stability, as well as their usual crystallinity allowing for facile purification.³ Noteworthy was the observation that added


base was not needed to convert bisulfite addition complex **4** to its required aldehyde form prior to reductive amination; the aqueous conditions sufficed for this purpose, unlike prior runs in organic solvents.³ The mild conditions under which this transformation occurred, together with this unprecedented approach in water, suggested that a more detailed evaluation be made of this new technology. In this Letter we describe such a study leading to both a general procedure and its application to several targets in the pharmaceutical industry.

Using the conditions established for TAK-954¹ that involved an aqueous solution containing 2 wt % TPGS-750-M,⁴ together with MeOH (20% v/v) as cosolvent⁵ and α -picolineborane⁶ as the hydride source (1.5 equiv), several functionalized bisulfite addition compounds and primary amines were examined to establish the scope of these reductive aminations. As shown in Table 1, most combinations afforded the desired products, isolated in typically $\geq 70\%$ to quantitative yields. Importantly, a wide variety of reaction partners was

Scheme 1. Key Reductive Amination Involving Bisulfite Addition Compound **4; Reducing Agent = α -Picolineborane**

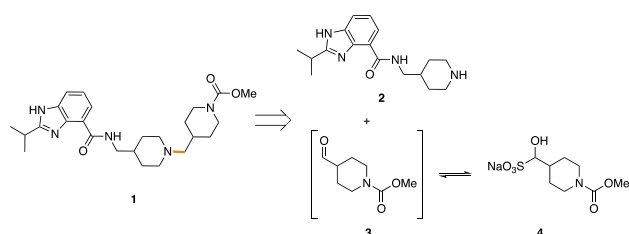

Received: August 4, 2021

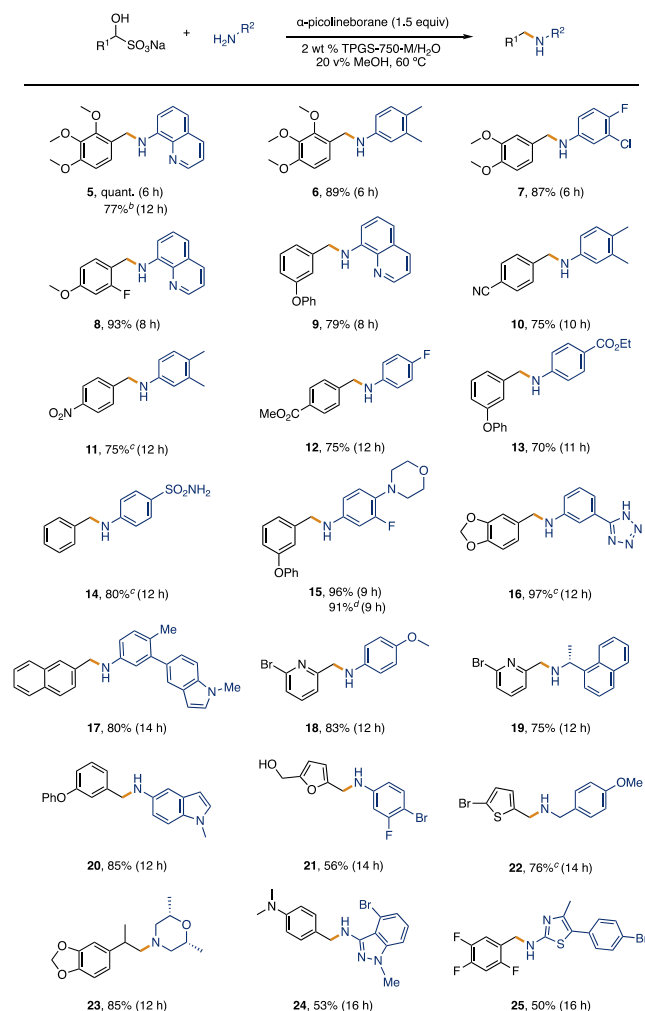Table 1. Representative Products from Reductive Aminations in Aqueous Nanoreactors^a

^aReaction conditions unless otherwise noted: 0.20 mmol of amine, 0.30 mmol of bisulfite adduct, 0.30 mmol α -picolineborane, stirred in 2 wt % TPGS-750-M/ H_2O and 20 v % MeOH, 60 $^\circ\text{C}$. Yields are for isolated purified products. ^bFree aldehyde instead of bisulfite adduct. ^cRun with 20 mol % HOAc present. ^dWithout 20 v % MeOH as cosolvent.

found to be amenable to this method. Given the compatibility with nitrogen-containing substrates and heterocycles, as well as the breadth of scope (including aryl-, heteroaryl-, and aliphatic aldehydes, etc.) this process is expected to be especially applicable to production of pharmaceuticals. Using the free aldehyde, rather than its bisulfite addition adduct, as in the case leading to product **5**, required 12 h to reach completion and afforded a lower isolated yield, mainly due to competing reduction to the corresponding undesired alcohol. Repeating the conversion to highly functionalized secondary amine **15** in the absence of cosolvent⁵ (i.e., 20% MeOH) still gave a high yield of product (91%) within the same time frame, suggesting that its presence is not essential in all cases. Occasionally, HOAc was needed to assist in shifting the equilibrium enhancing desired product formation (see products **11**, **14**, **16**, and **22**).

It is also important to place this approach in perspective, relative to existing technologies of late, even though these tended to involve far simpler target amines (Table 2). As the

Table 2. Comparison Cases: Representative Literature Methods vs This Work

2° amines from reductive aminations	literature conditions:	our conditions (yield, %)
	4 mol% $\text{Fe}_2(\text{CO})_{12}$ 50 bar H_2 toluene, 65 $^\circ\text{C}$ 73% yield ⁵	quant.
	5 mol% nanoporous Au 8 atm H_2 EtOH, 90 $^\circ\text{C}$ 53% yield ⁶	88%
	Pd/ImS3-14 (540 ppm Pd) 5 equiv HCOOH 5 equiv NaCOOH iPrOH/ H_2O , 70 $^\circ\text{C}$ 35% yield ⁷	quant.
	8000 ppm 1 wt% Pd/C 1.5 equiv Et_3SiH 2 wt% TPGS-750-M, 45 $^\circ\text{C}$ 75% yield ⁸	93%

^aReaction conditions unless otherwise noted: 0.20 mmol of amine, 0.30 mmol of bisulfite adduct, 0.30 mmol of α -picolineborane, stirred in 2 wt % TPGS-750-M/ H_2O and 20 v % MeOH, 60 $^\circ\text{C}$, 16 h. Yields are for isolated purified products. ^bRun with 20 mol % HOAc present.

top three examples illustrate, a moderate yield is characteristic of each,^{7–9} notwithstanding the choice of metal involved or the conditions used. The last case, utilizing our earlier set of conditions,⁹ still led to only a 75% yield of secondary amine. Thus, these results obtained under aqueous micellar conditions relative to those using traditional conditions of organic solvent, elevated temperatures, and oftentimes special equipment to accommodate the pressures involved are indicative of the far milder, more selective, and more efficient outcome to be expected when such reactions are run within nanoreactors solubilized in water.¹¹

Several secondary and tertiary amines were also prepared that correspond to subsections found in various known drugs and drug intermediates (**29** and **30**). As shown in Figure 1, pharmaceuticals prepared via reductive aminations include the following: (a) Buclizine, an antihistamine and antiemetic;¹² (b) Meclizine, used to treat or prevent nausea, vomiting, and dizziness caused by motion sickness;¹³ (c) Flunarizine, a selective calcium entry blocker;¹⁴ (d) Cinacalcet, a calcium sensing receptor agonist;¹⁵ (e) Piribedil, used in the treatment of Parkinson's disease;¹⁶ and (f) Donepezil, used to treat the behavioral and cognitive effects of Alzheimer's Disease and other types of dementia.¹⁷ The preparation of intermediate **29** serves as the precursor to both Bimipine, an antipruritic ointment,¹⁸ and Antazoline, an antihistamine.¹⁹ Product **30** functions as a precursor to Fipexide, used as a nootropic drug mainly for the treatment of senile dementia.²⁰ Taken together, these are suggestive of the potential for this technology to apply to "real world" (i.e., more complex) targets.

As usually associated with chemistry in water, the opportunity to recycle the aqueous medium²¹ was studied for these reductive aminations. Hence, following the initial conversion (96%) shown in Scheme 2 to secondary amine **15**, product isolation via decantation was followed by use of the aqueous reaction mixture for four additional reactions. The isolated yields obtained for each of the five conversions were virtually identical, all within the 93–97% range. Thus, using


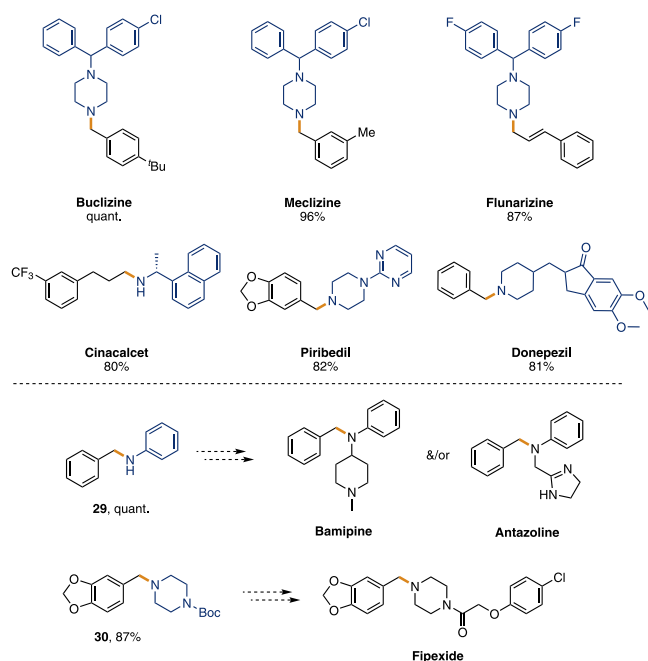


Figure 1. Reductive aminations used to prepare several known pharmaceutical targets.


Scheme 2. Recycling Study and E Factor Evaluation

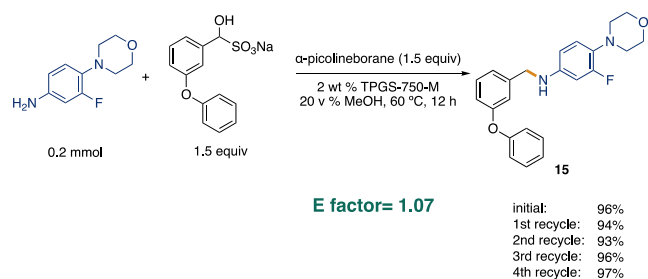

Sheldon's associated E Factor as a measure of greenness,²² and doing the calculation based on the solvents involved (MeOH and water, which make up 88% of the waste typically seen in drug syntheses),²³ the value of 1.07 is indicative of the environmentally responsible nature of this process. Eventually, of course, the water becomes part of the waste stream containing the surfactant; however, recent work by Novartis has outlined the path for dealing with this aspect of the technology.²⁴

As the toolbox of technologies associated with chemistry in water continues to expand,²⁵ so do the combinations now possible for sequential, one-pot processes that involve a variety of reactions in both the chemo- and, most recently, biocatalysis regimes.²⁶ The sequence shown in Scheme 3 is illustrative of the dramatic increases of complexity now possible in a single-pot operation, taking advantage of each step being run in the same, aqueous medium. Thus, following an initial Suzuki–Miyaura coupling, the resulting nitro-group-containing biaryl was reduced, without isolation, applying carbonyl iron powder (CIP)²⁷ to the corresponding aniline. This primary amine then participated readily in a reductive amination, the resulting secondary amine being acylated to afford the final product 31, all done in water, in an overall yield of 63%. Such possibilities for “telescoping” reactions offer several benefits, including

Scheme 3. Four-Step, One-Pot Sequence Run in Water without Isolation of Intermediates

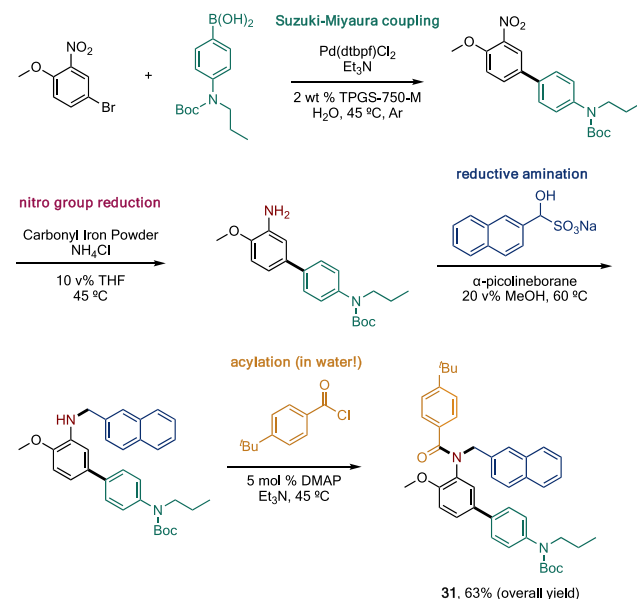

minimization of waste due to individual product processing and purification, as well as both time²⁸ and pot²⁹ economy.

In summary, reductive amination utilizing shelf-stable bisulfite addition compounds has been shown to be a generally applicable technology amenable to use under micellar conditions, run in recyclable water. TPGS-750-M serves as the designer surfactant that, in the presence of water, enables use of these educts to form their reactive aldehydes and, together with the amine present, react to generate the imine that undergoes reduction in the presence of the α -picolineborane as the stoichiometric hydride source. Several targets in the pharma area were prepared using this technology, which has been shown to minimize waste creation. Lastly, it was demonstrated that a reductive amination could be smoothly utilized as part of a multistep sequence performed in water without isolation of reaction intermediates. Several additional new technologies that, likewise, are respectful of their environmental footprints will be forthcoming from these laboratories.

■ ASSOCIATED CONTENT

Supporting Information

The Supporting Information is available free of charge at <https://pubs.acs.org/doi/10.1021/acs.orglett.1c02604>.

Experimental procedures, analytical data, and copies of NMR spectra for all compounds (PDF)

■ AUTHOR INFORMATION

Corresponding Authors

Bruce H. Lipshutz – Department of Chemistry & Biochemistry, University of California, Santa Barbara, California 93106, United States; orcid.org/0000-0001-9116-7049; Email: lipshutz@chem.ucsb.edu

J. Daniel Bailey – Process Chemistry Development, Takeda Pharmaceuticals, Cambridge, Massachusetts 02139, United States; orcid.org/0000-0002-6401-0692; Email: Dan.Bailey@Takeda.com

Authors

Xiaohan Li – Department of Chemistry & Biochemistry,
University of California, Santa Barbara, California 93106,
United States

Karthik S. Iyer – Department of Chemistry & Biochemistry,
University of California, Santa Barbara, California 93106,
United States

Ruchita R. Thakore – Department of Chemistry &
Biochemistry, University of California, Santa Barbara,
California 93106, United States

David K. Leahy – Process Chemistry Development, Takeda
Pharmaceuticals, Cambridge, Massachusetts 02139, United
States; orcid.org/0000-0003-4128-7792

Complete contact information is available at:

<https://pubs.acs.org/10.1021/acs.orglett.1c02604>

Notes

The authors declare no competing financial interest.

■ ACKNOWLEDGMENTS

Financial support provided by Takeda Pharmaceuticals is warmly acknowledged with thanks.

■ REFERENCES

- (1) Bailey, J. D.; Helbling, E.; Mankar, A.; Stirling, M.; Hicks, F.; Leahy, D. K. Beyond Organic Solvents: Synthesis of a 5-HT₄ Receptor Agonist in Water. *Green Chem.* **2021**, *23*, 788–795.
- (2) <https://cen.acs.org/people/awards/Daniel-Bailey-wins-Peter-J-/98/i20>.
- (3) Faul, M.; Larsen, R.; Levinson, A.; Tedrow, J.; Vounatsos, F. Direct Reductive Amination of Aldehyde Bisulfite Addition Adducts by 2-Picoline Borane: Application to the Synthesis of a DPP-IV Inhibitor. *J. Org. Chem.* **2013**, *78*, 1655–1659.
- (4) Lipshutz, B. H.; Ghorai, S.; Abela, A. R.; Moser, R.; Nishikata, T.; Duplais, C.; Krasovskiy, A.; Gaston, R. D.; Gadwood, R. C. TPGS-750-M: A Second-Generation Amphiphile for Metal-Catalyzed Cross-Couplings in Water at Room Temperature. *J. Org. Chem.* **2011**, *76*, 4379–4391.
- (5) Gabriel, C. M.; Lee, N. R.; Bigorne, F.; Klumphu, P.; Parmentier, M.; Gallou, F.; Lipshutz, B. H. Effects of Co-Solvents on Reactions Run under Micellar Catalysis Conditions. *Org. Lett.* **2017**, *19*, 194–197.
- (6) Sato, S.; Sakamoto, T.; Miyazawa, E.; Kikugawa, Y. One-pot reductive amination of aldehydes and ketones with α -picoline-borane in methanol, in water, and in neat conditions. *Tetrahedron* **2004**, *60*, 7899–7906.
- (7) Fleischer, S.; Zhou, S.; Junge, K.; Beller, M. An Easy and General Iron-Catalyzed Reductive Amination of Aldehydes and Ketones with Anilines. *Chem. - Asian J.* **2011**, *6*, 2240–2245.
- (8) Takale, B. S.; Feng, X.; Lu, Y.; Bao, M.; Jin, T.; Minato, T.; Yamamoto, Y. Unsupported Nanoporous Gold Catalyst for Chemoselective Hydrogenation Reactions under Low Pressure: Effect of Residual Silver on the Reaction. *J. Am. Chem. Soc.* **2016**, *138*, 10356–10364.
- (9) Drinkel, E. E.; Campedelli, R. R.; Manfredi, A. M.; Fiedler, H. D.; Nome, F. Zwitterionic-Surfactant-Stabilized Palladium Nanoparticles as Catalysts in the Hydrogen Transfer Reductive Amination of Benzaldehydes. *J. Org. Chem.* **2014**, *79*, 2574–2579.
- (10) Thakore, R. R.; Takale, B. S.; Casotti, G.; Gao, E. S.; Jin, H. S.; Lipshutz, B. H. Chemoselective Reductive Aminations in Aqueous Nanoreactors Using Parts per Million Level Pd/C Catalysis. *Org. Lett.* **2020**, *22*, 6324–6329.
- (11) Lippincott, D. J.; Landstrom, E.; Cortes-Clerget, M.; Lipshutz, B. H.; Buescher, K.; Schreiber, R.; Durano, C.; Parmentier, M.; Ye, N.; Wu, B.; Shi, M.; Yang, H.; Andersson, M.; Gallou, F. Surfactant Technology: With New Rules, Designing New Sequences Is Required! *Org. Process Res. Dev.* **2020**, *24*, 841–849.
- (12) Mostafa, G. A. E.; Al-Badr, A. A. Chapter 1 - Buclizine. In *Profiles of Drug Substances, Excipients and Related Methodology*; Brittain, H. G., Ed.; Academic Press: 2011; Vol. 36, pp 1–33.
- (13) Cohen, B.; deJong, J. M. B. V. Meclizine and Placebo in Treating Vertigo of Vestibular Origin: Relative Efficacy in a Double-Blind Study. *Arch. Neurol.* **1972**, *27*, 129–135.
- (14) Amery, W. K. Flunarizine, a Calcium Channel Blocker: A New Prophylactic Drug in Migraine. *Headache J. Headache* **1983**, *23*, 70–74.
- (15) Iqbal, J.; Zaidi, M.; Schneider, A. E. Cinacalcet Hydrochloride (Amgen). *IDrugs Investig. Drugs J.* **2003**, *6*, 587–592.
- (16) Millan, M. J.; Cussac, D.; Milligan, G.; Carr, C.; Audinot, V. R.; Gobert, A.; Lejeune, F. O.; Rivet, J.-M.; Brocco, M.; Duqueyroux, D.; Nicolas, J.-P.; Boutin, J. A.; Newman-Tancredi, A. Antiparkinsonian Agent Piribedil Displays Antagonist Properties at Native, Rat, and Cloned, Human 2-Adrenoceptors: Cellular and Functional Characterization. *12*.
- (17) Dooley, M.; Lamb, H. M. Donepezil: A Review of Its Use in Alzheimer's Disease. *Drugs Aging* **2000**, *16*, 199–226.
- (18) Birknes, B. An Antihistaminic Agent: Soventol Hydrochloride Monohydrate Ethanol Solvate. *Acta Crystallogr., Sect. B: Struct. Crystallogr. Cryst. Chem.* **1977**, *33*, 2301–2303.
- (19) Bertolasi, V.; Borea, P. A.; Gilli, G. Antazoline Hydrochloride. *Acta Crystallogr., Sect. B: Struct. Crystallogr. Cryst. Chem.* **1982**, *38*, 2522–2525.
- (20) Bompani, R.; Scali, G. Fipexide, an Effective Cognition Activator in the Elderly: A Placebo-Controlled, Double-Blind Clinical Trial. *Curr. Med. Res. Opin.* **1986**, *10*, 99–106.
- (21) Lipshutz, B. H.; Isley, N. A.; Fennewald, J. C.; Slack, E. D. Cover Picture: On the Way Towards Greener Transition-Metal-Catalyzed Processes as Quantified by E Factors. *Angew. Chem., Int. Ed.* **2013**, *52*, 10911. For these reactions, using products **24**, **25**, and **29** as representative examples, the pH of the aqueous reaction mixtures are all in the 5–6 range.
- (22) Sheldon, R. A. E. Factors, Green Chemistry and Catalysis: An Odyssey. *Chem. Commun.* **2008**, *29*, 3352.
- (23) ACS GCI Pharmaceutical Roundtable. **2011**, *2*.
- (24) Krell, C.; Schreiber, R.; Hueber, L.; Sciascera, L.; Zheng, X.; Clarke, A.; Haenggi, R.; Parmentier, M.; Baguia, H.; Rodde, S.; Gallou, F. Strategies to Tackle the Waste Water from α -Tocopherol-Derived Surfactant Chemistry. *Org. Process Res. Dev.* **2021**, *25*, 900–915.
- (25) Cortes-Clerget, M.; Yu, J.; Kincaid, J. R. A.; Walde, P.; Gallou, F.; Lipshutz, B. H. Water as the Reaction Medium in Organic Chemistry: From Our Worst Enemy to Our Best Friend. *Chem. Sci.* **2021**, *12*, 4237–4266.
- (26) Cortes-Clerget, M.; Akporji, N.; Zhou, J.; Gao, F.; Guo, P.; Parmentier, M.; Gallou, F.; Berthon, J.-Y.; Lipshutz, B. H. Bridging the Gap between Transition Metal- and Bio-Catalysis via Aqueous Micellar Catalysis. *Nat. Commun.* **2019**, *10*, 2169.
- (27) Lee, N. R.; Bikovtseva, A. A.; Cortes-Clerget, M.; Gallou, F.; Lipshutz, B. H. Carbonyl Iron Powder: A Reagent for Nitro Group Reductions under Aqueous Micellar Catalysis Conditions. *Org. Lett.* **2017**, *19*, 6518–6521.
- (28) Hayashi, Y. Time Economy in Total Synthesis. *J. Org. Chem.* **2021**, *86*, 1–23.
- (29) Hayashi, Y. Pot Economy and One-Pot Synthesis. *Chem. Sci.* **2016**, *7*, 866–880.